

AKVA STORAGE BASE

- Mount the roller locks on the cabinet sides where this is marked with two holes (1).
- Assemble the cabinet sides (2). Mount the spacer with the milled groove so that it is placed at the bottom of the cabinet. The groove should be closer to the front facing upwards (3).
- Assemble the cabinets with an intermediate piece (4).
- Place an intermediate piece on the cabinets at the leg end (4).
- At the head end, mount the two head end pieces which may vary in length depending on the length of the bed (4). Attach the base end using the aluminium corners (5).
- If the bed has a headboard: mount the headboard brackets on the head end piece (6).
- Place the bearers in the milled grooves on the cabinet sides. Screw the centre bearer onto the cabinet sides (6).
- Mount the roller locks on the front (7).
- Insert the front holder in the pre-drilled holes on the front. Ensure that the tip of the holder is facing away from the front so that you have an opening that fits into the milled groove (7).
- The front is placed by tilting it into the groove and then lifting it up (8).
- Place the stabilisers as shown in the drawing. With headboard (9). Without headboard (10).
- For fitting the base boards: see the instructions for the Akva box base

NB! If the base has storage space on only one side or is designed for a bed with a width of 90, 100 or 120 cm: see instructions for Akva storage base, single

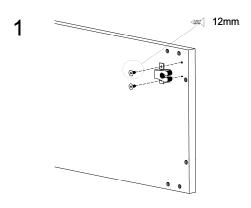



4

