


# INSTRUCTION MANUAL

## Nori

Bed frame

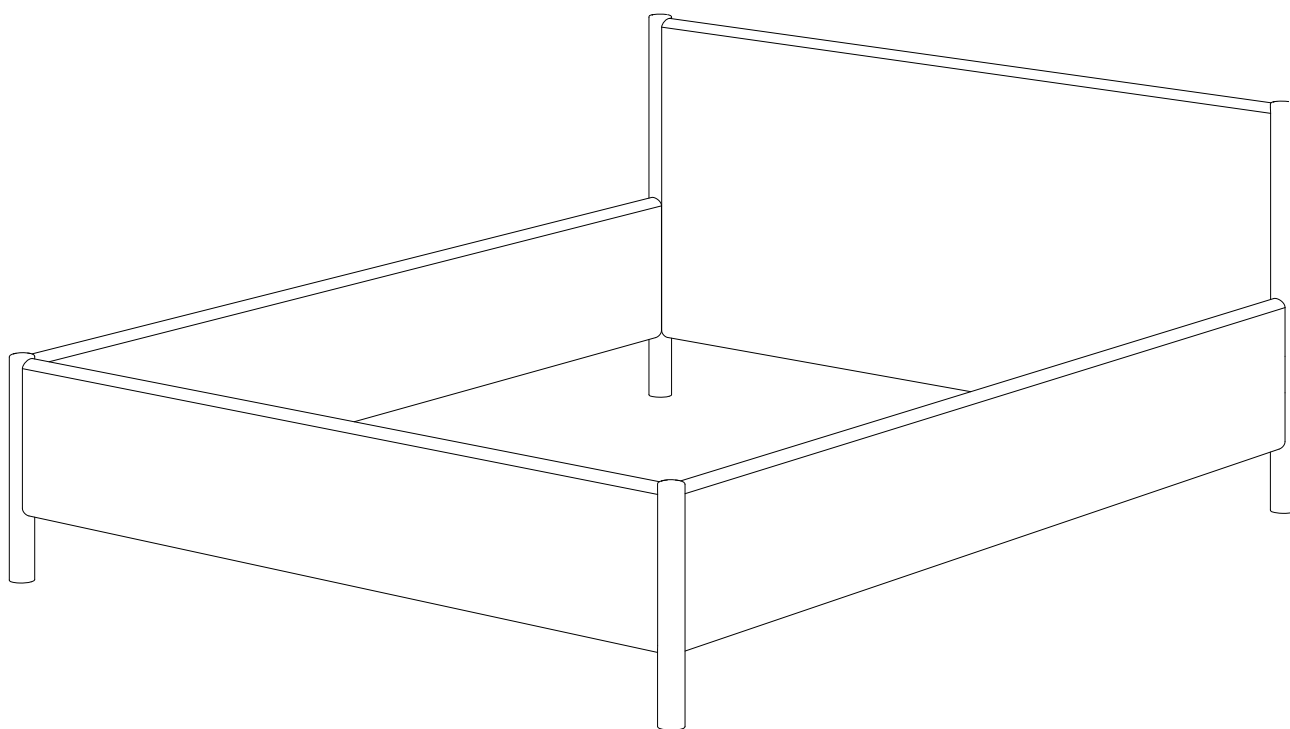

Parts

Fittings



A x 18



B x 18




C x 6

Frame



D x 2

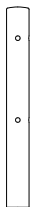


E x 2



F x 1





G x 1

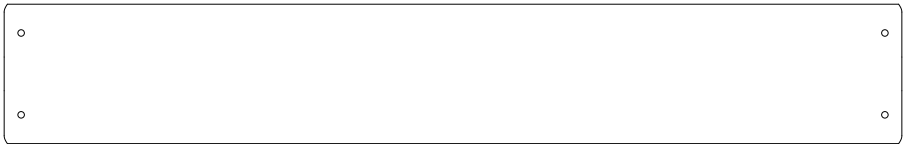

H x 2

1

Parts	
A x 8	
E x 2	

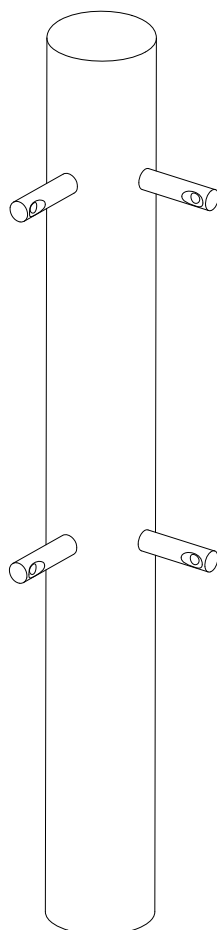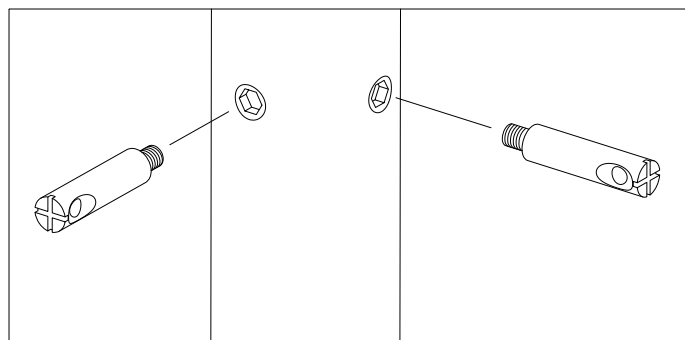


2

Parts


A x 10

D x 2

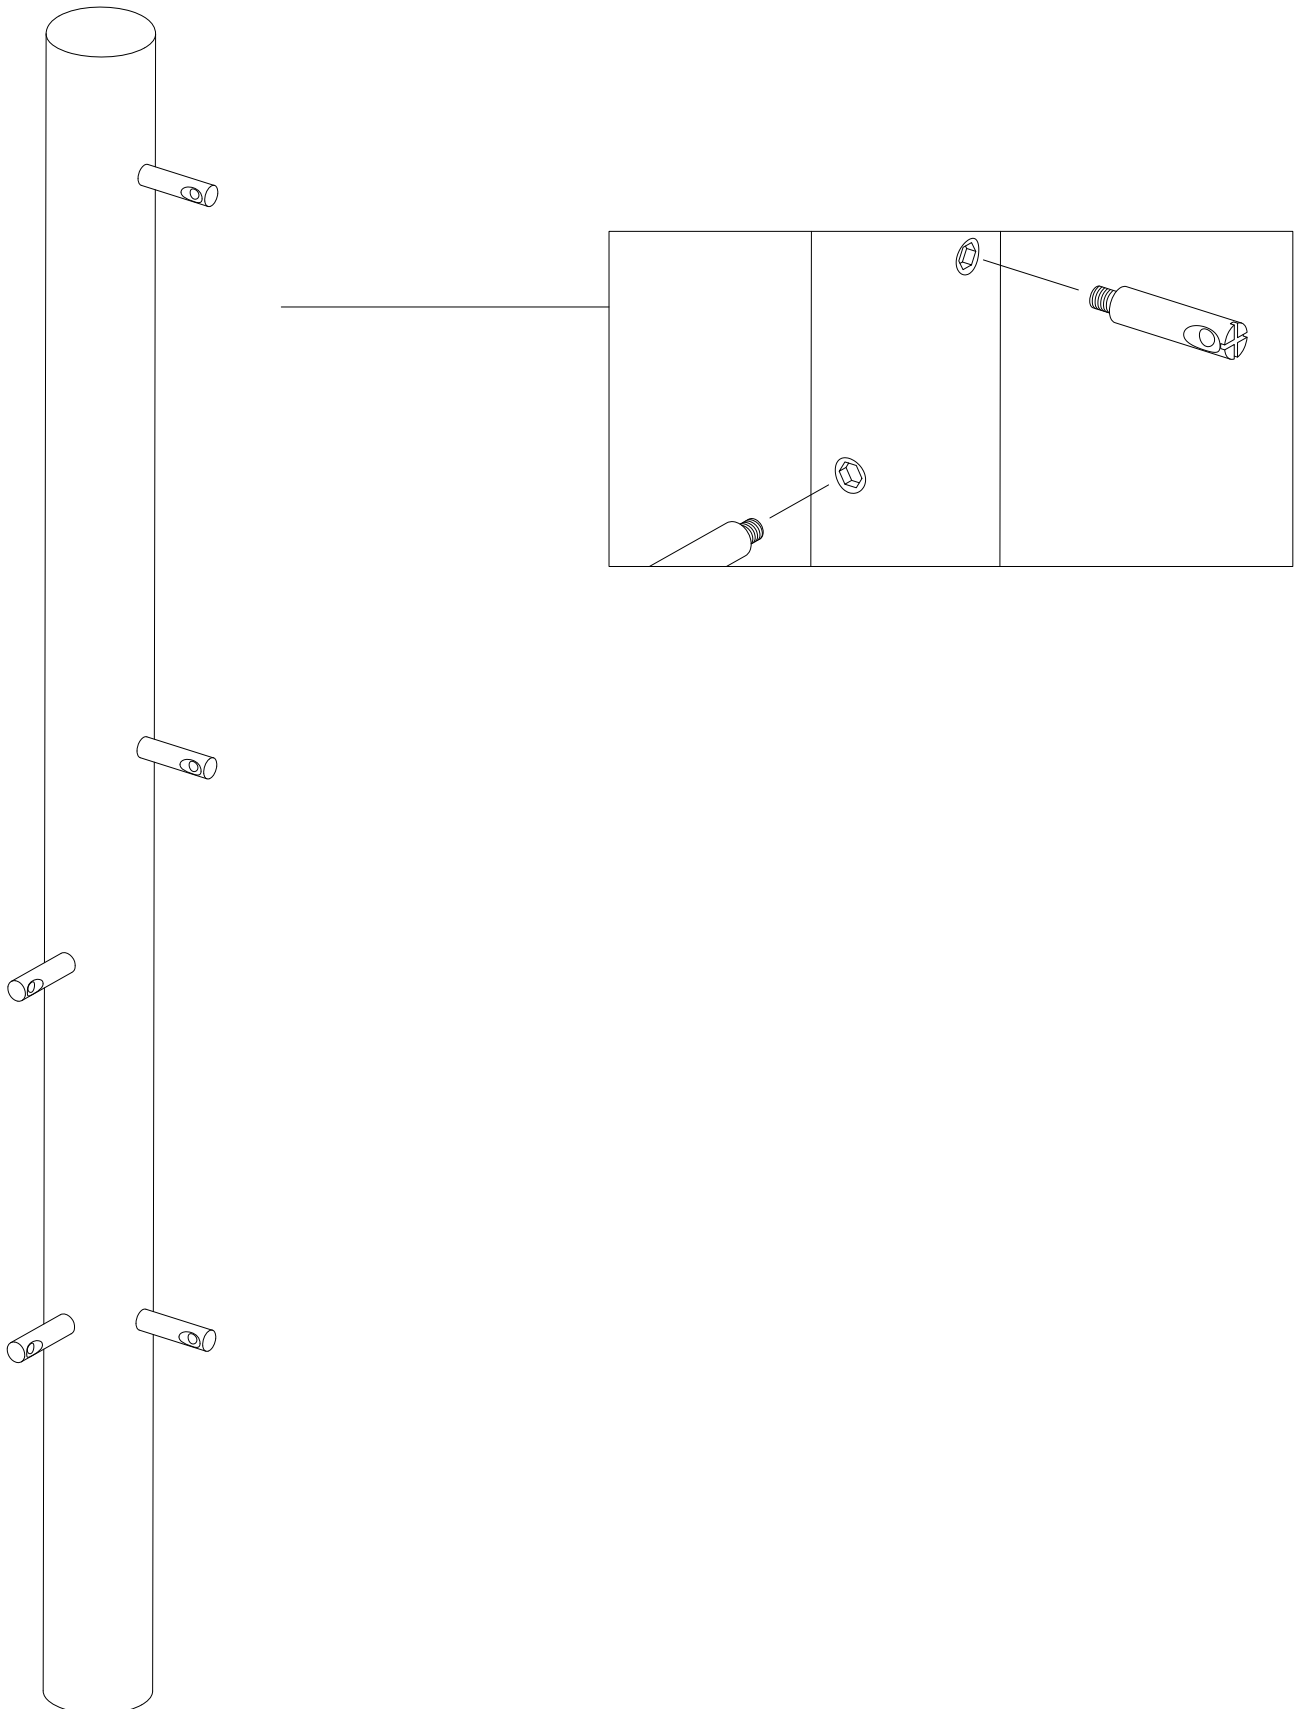


3

Parts	
B x 4	
F x 1	

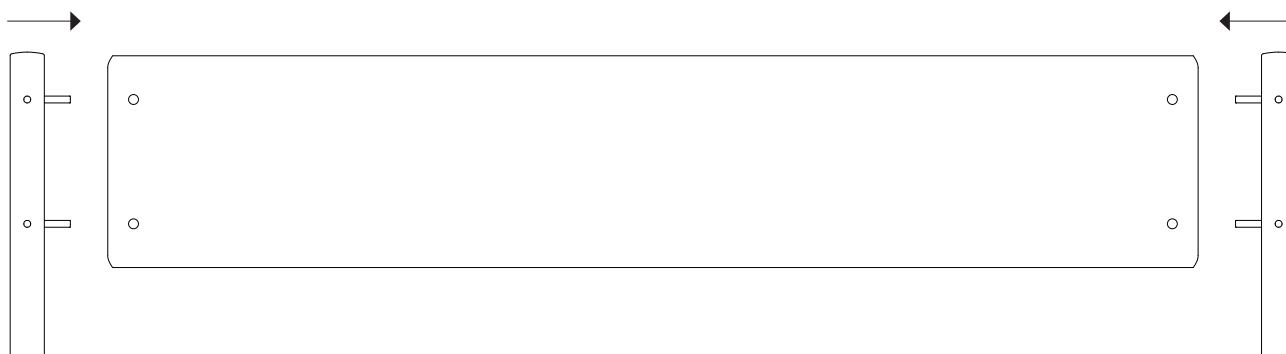


See next page →


3.1

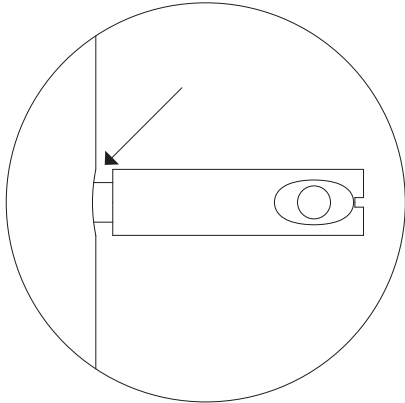


Adjust bracket

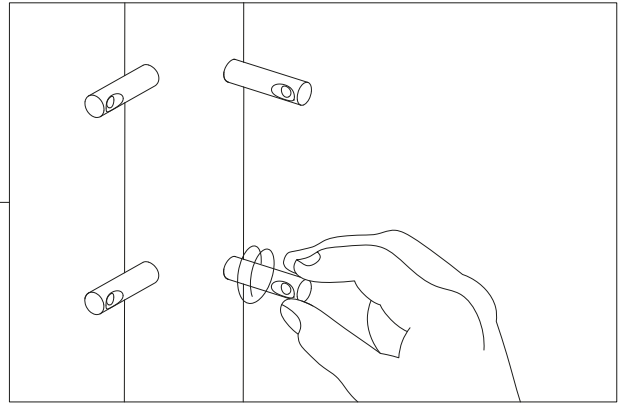


3.2

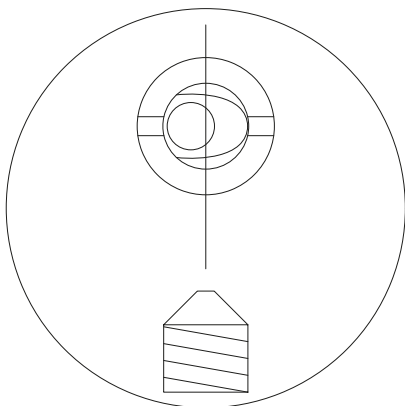

Screw & brackets has to be offcenter to create a tight fit

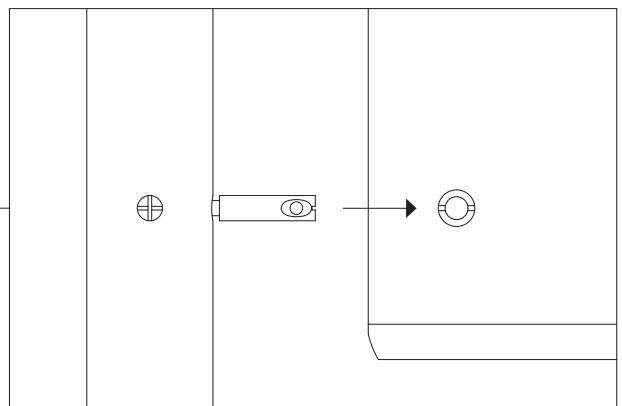

3.3

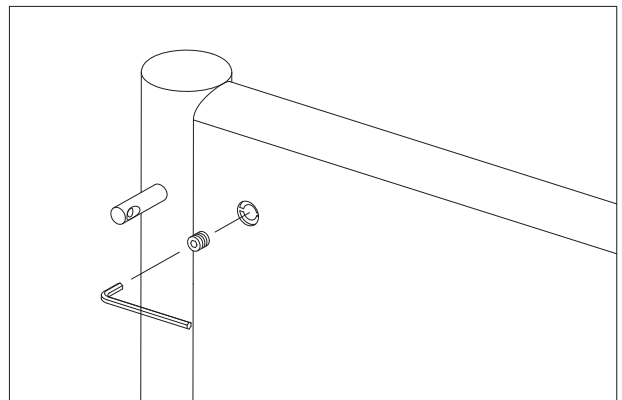


Parts	
B x 6	
C x 6	
G x 1	




See next page →


4.1

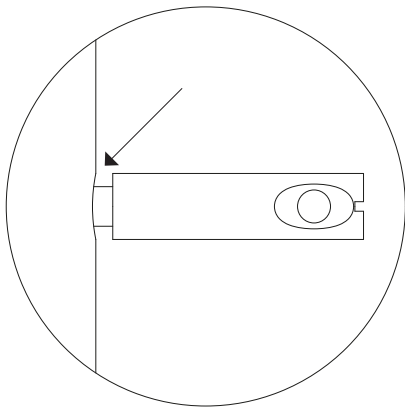


Adjust bracket

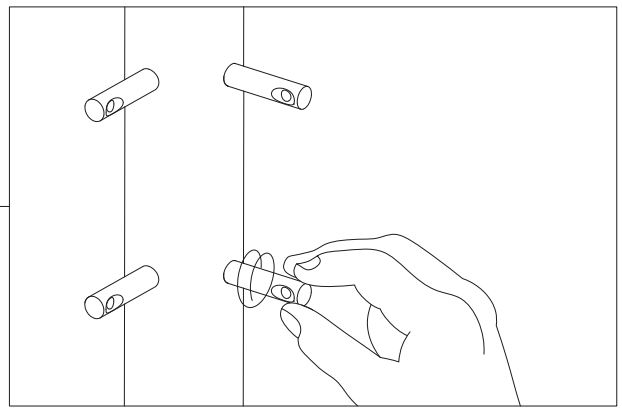


4.2

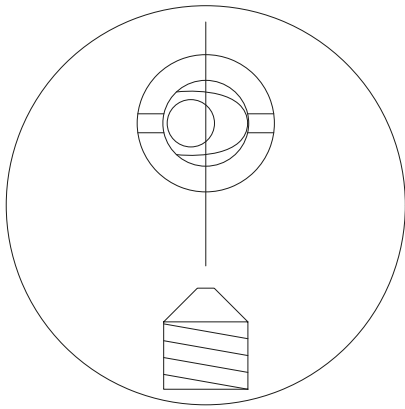


Screw & brackets has to be offcenter to create a tight fit

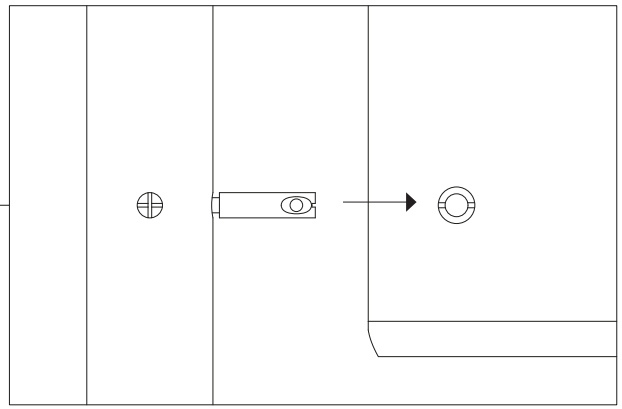


4.3

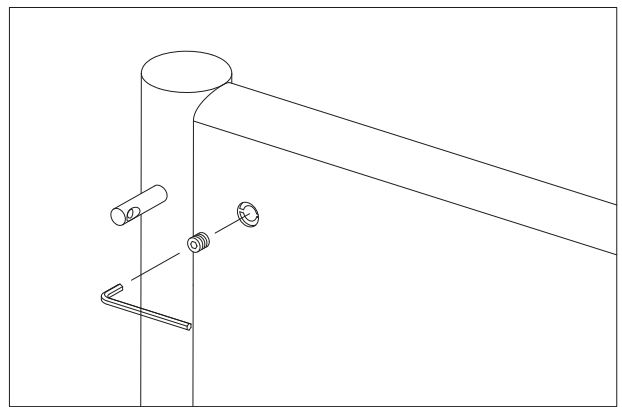


4.4

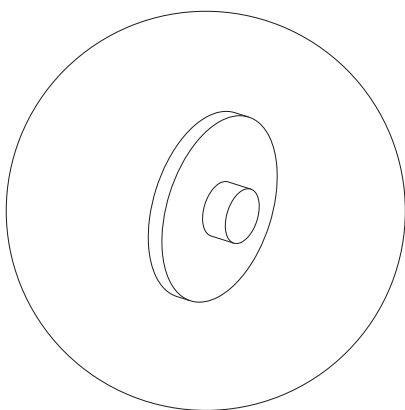


x 6

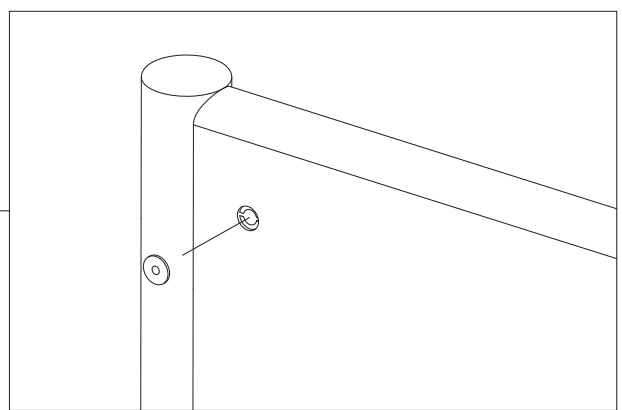

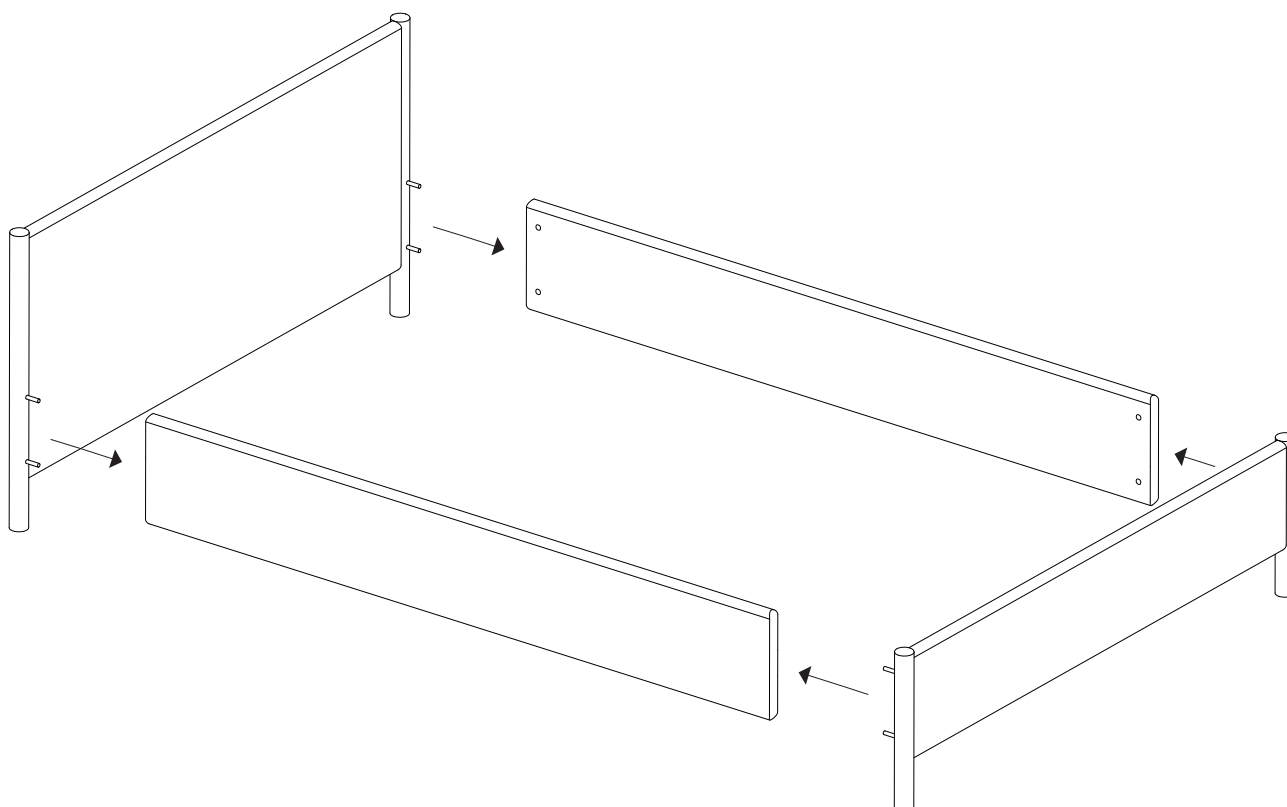


**See next page**


5.1

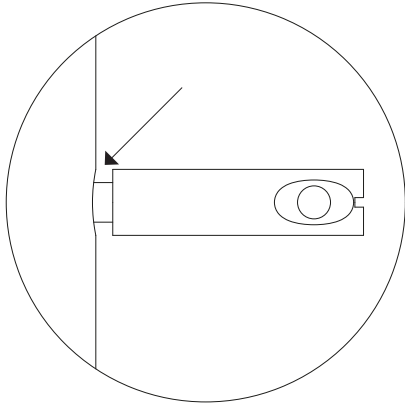


Adjust bracket

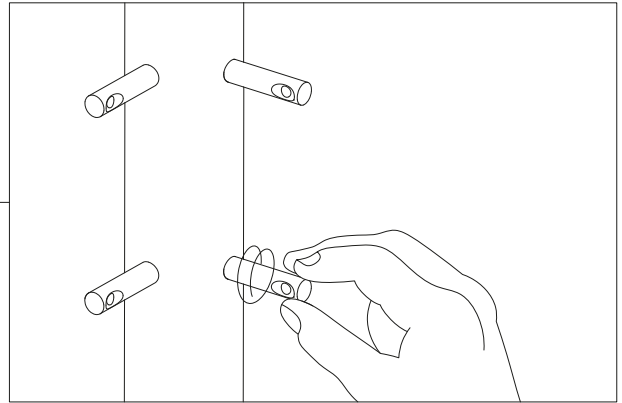


5.2

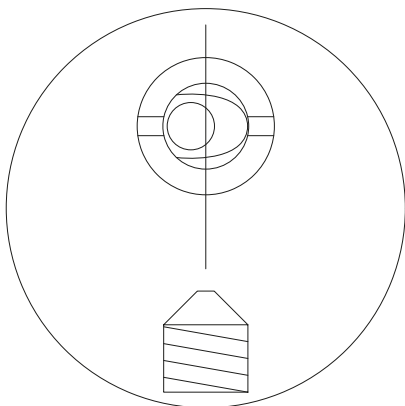


Screw & brackets has to be offcenter to create a tight fit

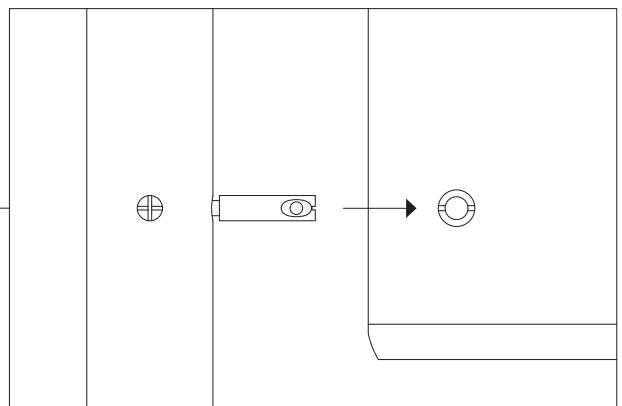

5.3

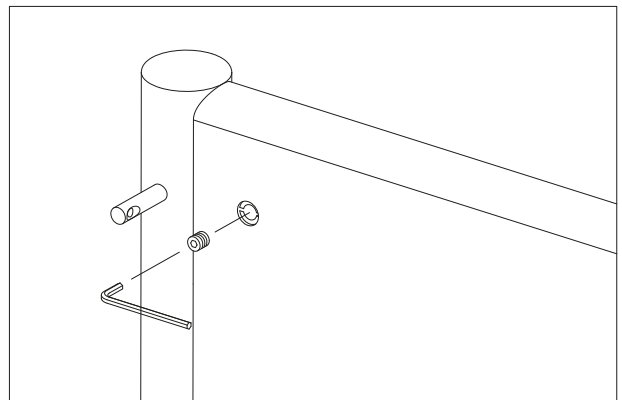

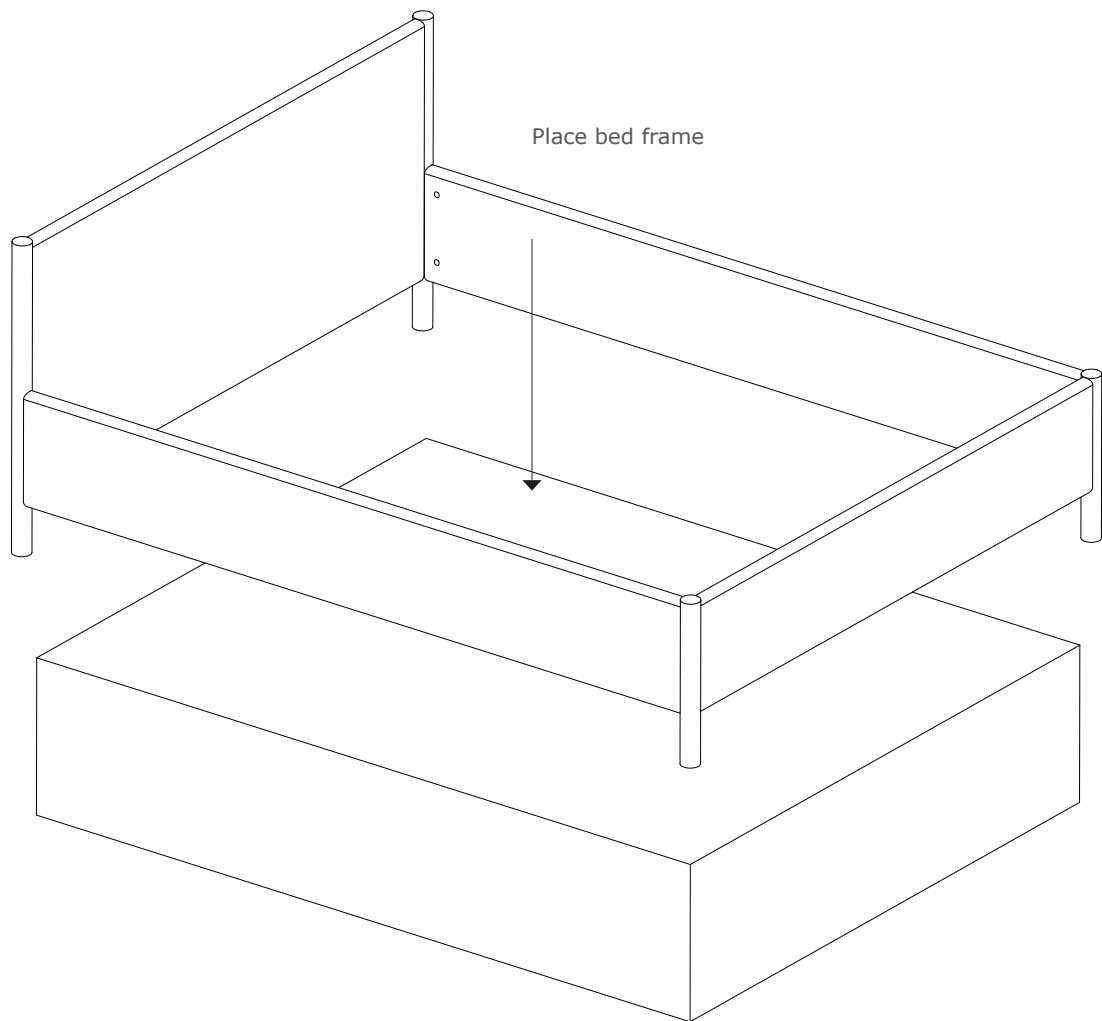



[www.akva.com](http://www.akva.com)